
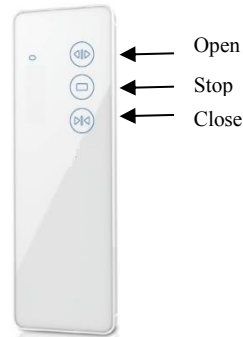


# Remote Control Programming Instructions for CL-920 series

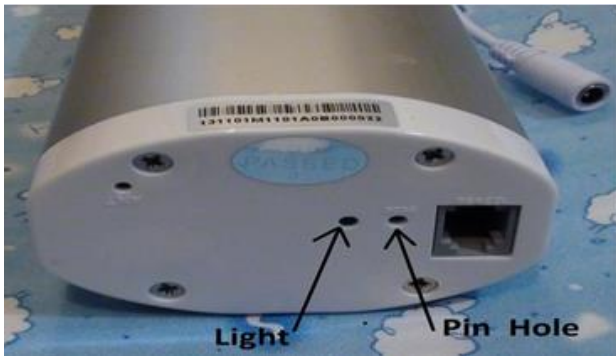

## **Important Notes**

Do NOT program the Motor until the Track is fully tested working properly by hand as follow:  
- Hand move the Master Carrier back and forth the whole track a few times to make sure the Master Carrier travels smoothly along the track.

## **Pair the Remote Control and the Motor** (or Watch video: [Click here to Watch the Video](#) )

- Insert AAA batteries to the Remote Control.
- On the Motor, press inside the “pin hole” (a few seconds) with a pin till the “light” stays on.
- Press Remote Control “Open” button 3 times.
- Light blinks 3 times and the Master Carrier on the Track starts moving.
- Let the Carrier moves to the end and do NOT stop it.
- Press “Close” button on Remote and let the Carrier moves to the other end. (Do not stop it)
- Press “Open” button on Remote and let the Carrier moves to the other end.
- Done. Now it is ready for operations: Open, Close or Stop by the Remote Control.

## **Note**

If you have multiple channel Remote Control or more than 1 Remote Control, you may repeat the above Pairing to the same Motor which is able to learn multiple channels from Remote Control(s).

## **Clear all Channel#**

- On the Motor, press the “pin hole” a few seconds till the ‘light’ stays on. Release the pin.
- Then again, press the same “pin hole” a few seconds till the “light” blinks 3 times and goes off. Done.

## **Clear the Travel Limit**

- On the Motor, press the “pin hole” a few seconds till the ‘light’ stays on. Release the pin.
- Then press the pin hole 3 times. “Light” blinks 3 times and goes off. Done.

## **Reverse the Motor Turning Direction**

- On the Motor, press the “pin hole” a few seconds till the ‘light’ stays on. Release the pin.
- On the Remote Control, press the Close button a couple times.  
The Motor “light” will blink 3 times and goes off. Done.

Questions? Email to: [Support@ElectriCurtain.com](mailto:Support@ElectriCurtain.com)