
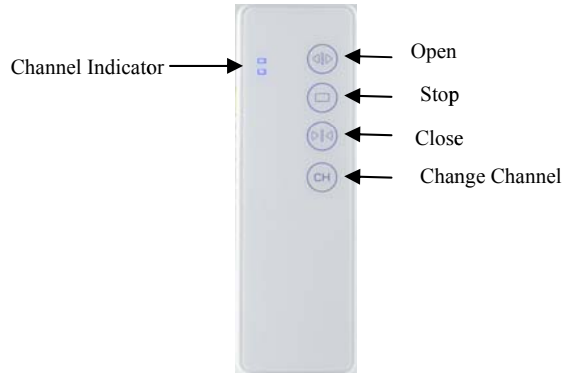


# Remote Control Programming Instructions for CL-920 series

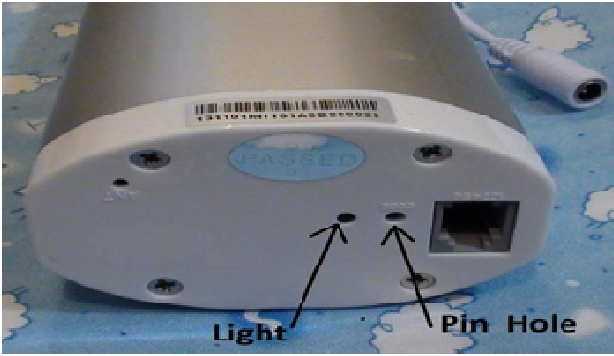

- Please make sure the Track is assembled.
- Please insert the Motor securely into the Track. Watch video: [Click here to Watch Video](#) (To unlock the Motor, push in the “red knob” and pull the Motor off the Track)

## Important Notes

- Do NOT program the Motor until the Track is fully tested working properly by hand as follow:**
- Hand move the Master Carrier back and forth the whole track a few times to make sure the Master Carrier is moving smoothly along the track.

## Pair the Remote Control and Program the Motor (see video: <https://www.youtube.com/watch?v=lzWioeXkIGQ>)

- Insert AAA batteries to the Remote Control.
- Select channel# (upper blue light = #1; lower blue light = #2; both blue lights = #3).
- Hand move the Carrier on the Track to about 1/3 of the track.
- Plug in Power for the Motor. The light on the bottom of the Motor flashes a couple times.
- Use a pin to press the “pin hole” next to the light for a few seconds till the “light” stays on solid, then release the pin.
- Press Remote Control "Open" button 5 times.  
The Carrier(s) on the Track starts moving. Let it move all the way to the end. Do NOT stop it.
- Press "Close" button on the Remote Control.  
The Carrier on the Track starts moving to the other direction. Let it move all the way to the end. Do NOT stop it.
- Press "Open" button on the Remote Control.  
The Carrier on the Track starts moving to the other direction. Let it move all the way to the end. Do NOT stop it.
- Now it is ready to operate: Open, Close or Stop by the Remote Control.

## Reversing the Motor Direction (in case the Open or Close is reversed)

- On the Motor, press and hold the “pin hole” for a few seconds till the “light” stays on solid. Release the pin.
- On the Remote Control, press the "Close" button 3 times.  
The Motor “light” blinks 3 times and goes off. Done.

## Pair additional Remote Control channels to the Motor

Motor is able to learn additional channels from 1 or even more Remote Controls. Instruction as follow:

- Use a pin to press the “pin hole” next to the light for a few seconds till the “light” stays on solid, then release the pin.
- Press Remote Control "Open" button 3 times. Done.

## Clearing Channel#

- On the Motor, press and hold the “pin hole” for a few seconds till the “light” stays on solid. Release the pin.
- Then again, press and hold the same “pin hole” a few seconds till the “light” blinks 3 times and goes off. Done.

## Clearing Travel Limit

- On the Motor, press and hold the “pin hole” for a few seconds till the “light” stays on solid. Release the pin.
- Then press the pin hole 3 times. “Light” blinks 3 times and goes off. Done.